


# Pre-installation guide

Prepare your room before delivery and assembly. This guide covers the flat-pack infrared sauna range supplied by Crystal Bathroom.

## 01 / SPACE ABOVE THE CABIN

Allow approximately **10-15 cm above the sauna** to fit the roof and connect the wiring and control board.

Keep the roof components accessible for future servicing. No additional side clearance is required for ventilation for the cabins covered by this guide.

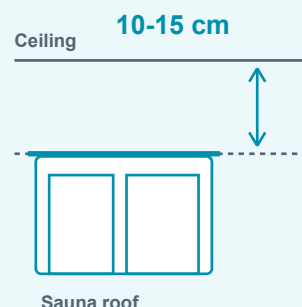

## 02 A level, stable floor

The cabin has its own floor and must be fully supported on a **flat, level and firm base**. Once assembled, it must sit securely without rocking.

## 03 Power supply and plug

The infrared saunas covered by this guide connect to a **standard Irish 13 A socket, 220-240 V / 50 Hz**. They are supplied with a European two-pin plug, which must be replaced with a suitable Irish three-pin 13 A plug before use.

### Bathroom installation

All Crystal Bathroom infrared sauna models are suitable for bathroom installation. For bathroom installations, the sauna must be hardwired by a qualified electrician using a suitable electrical connection box and installed in a location permitted by the applicable electrical requirements.

## 04 Delivery access and assembly space

The sauna arrives flat-packed for assembly in its destination room. The panels are designed to pass through standard doorways. Allow working space around the cabin during assembly before moving it into its final position.

Contact us before delivery if access involves a narrow staircase, sharp turns or a restricted loft or attic entrance.

Use this guide alongside the assembly instructions for your model. If the model-specific instructions state different requirements, contact Crystal Bathroom before installation.